


Definitions and Terminology

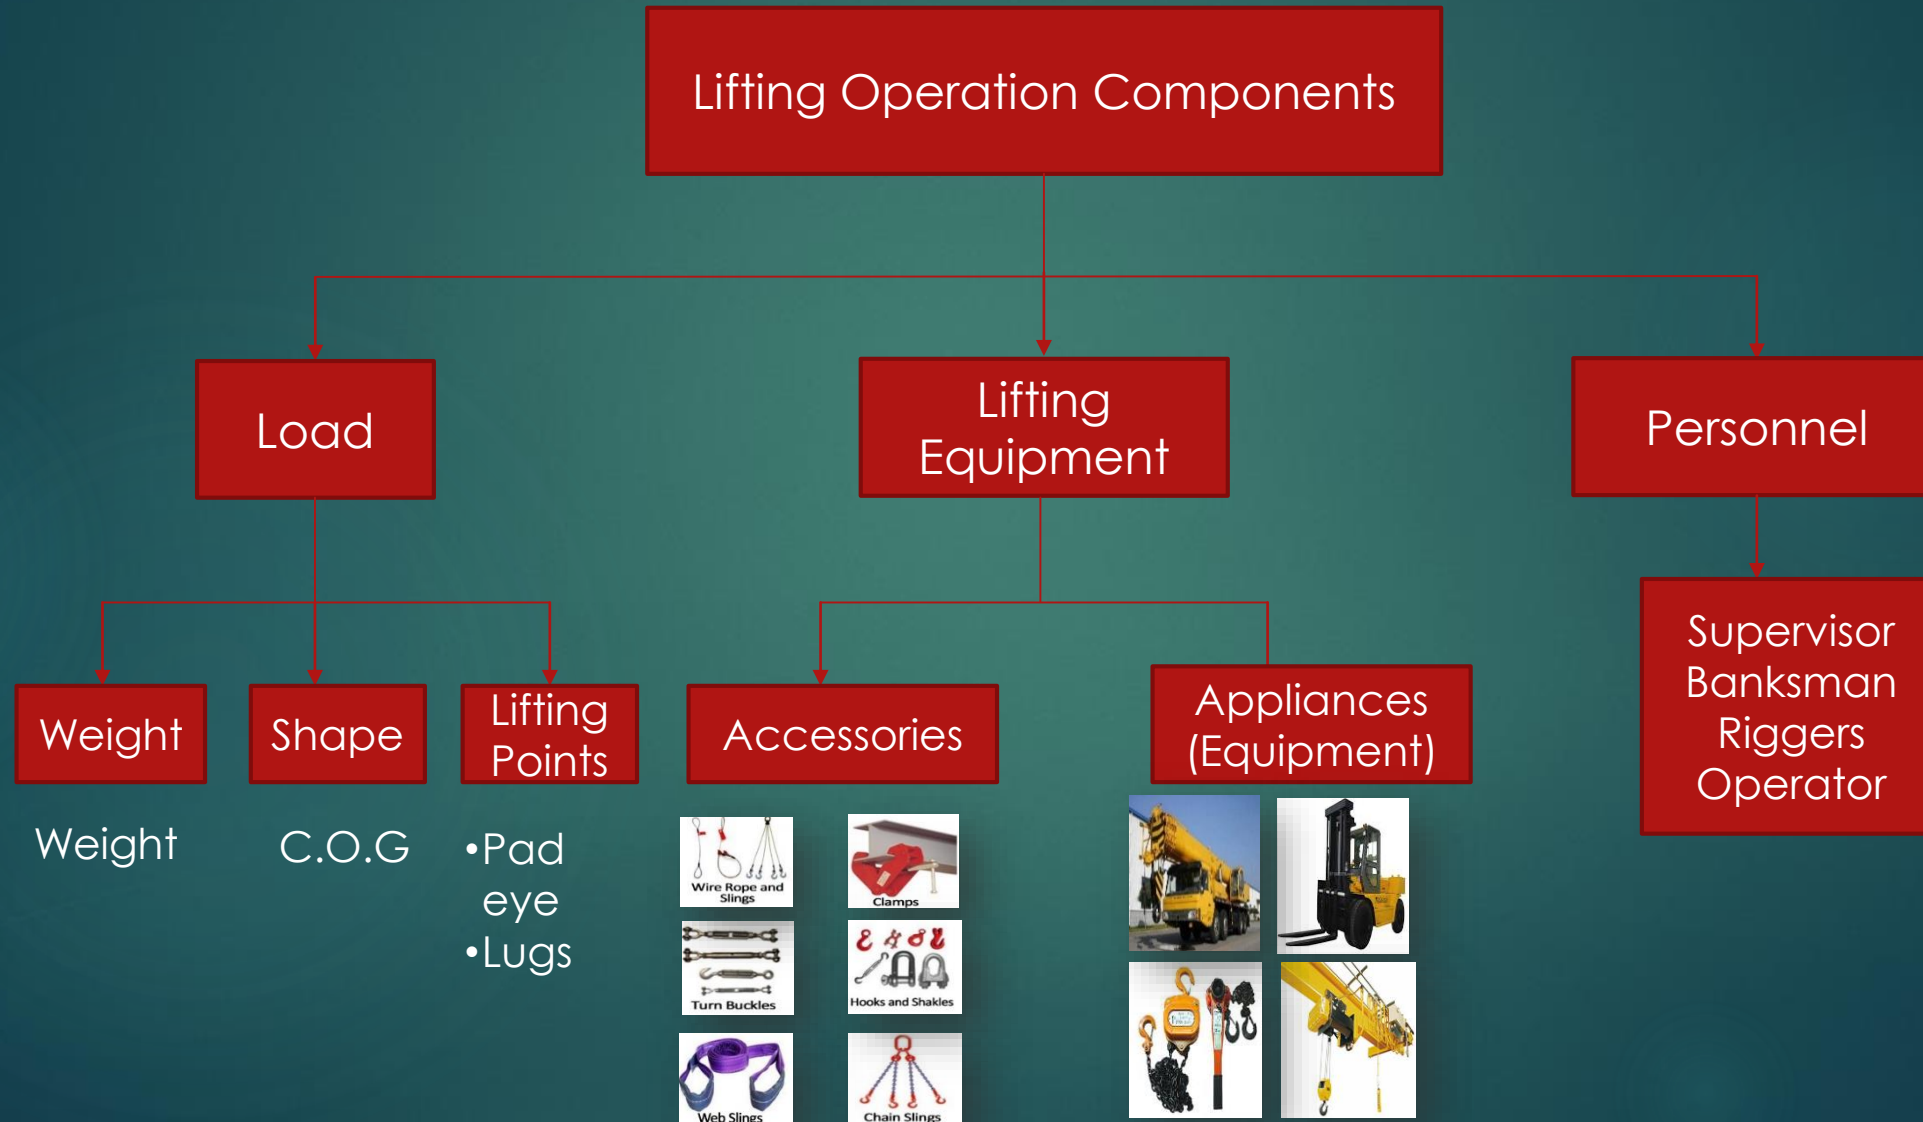

Lifting Appliances



Land Rigs




Offshore Rigs

Lifting Accessories





Lifting Accessories

Wire Rope Sling

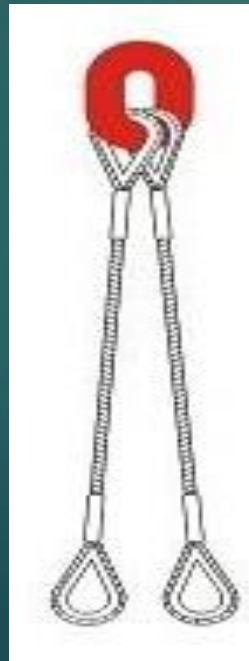

Lifting Accessories

Wire Rope Sling Defects

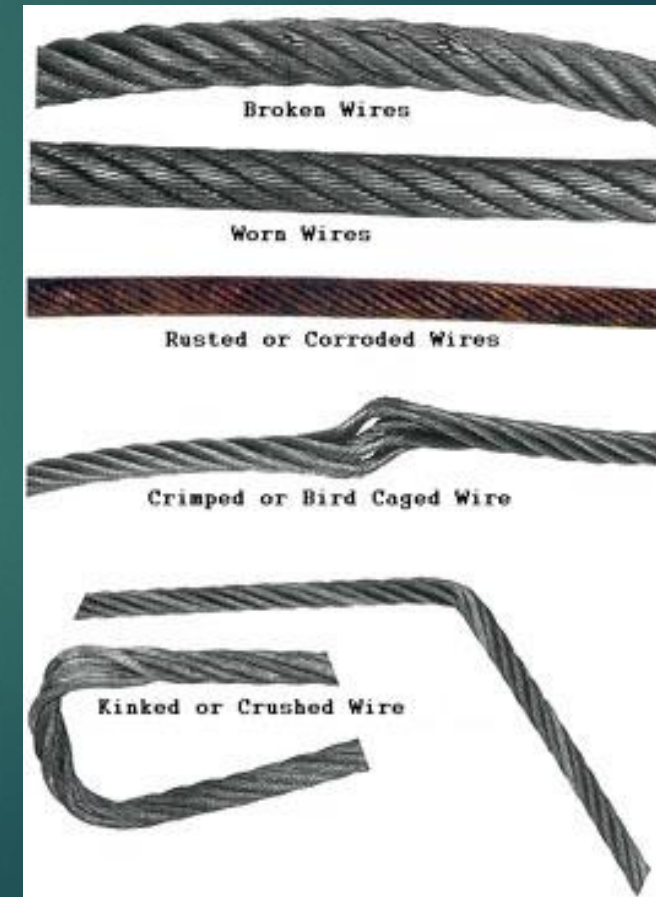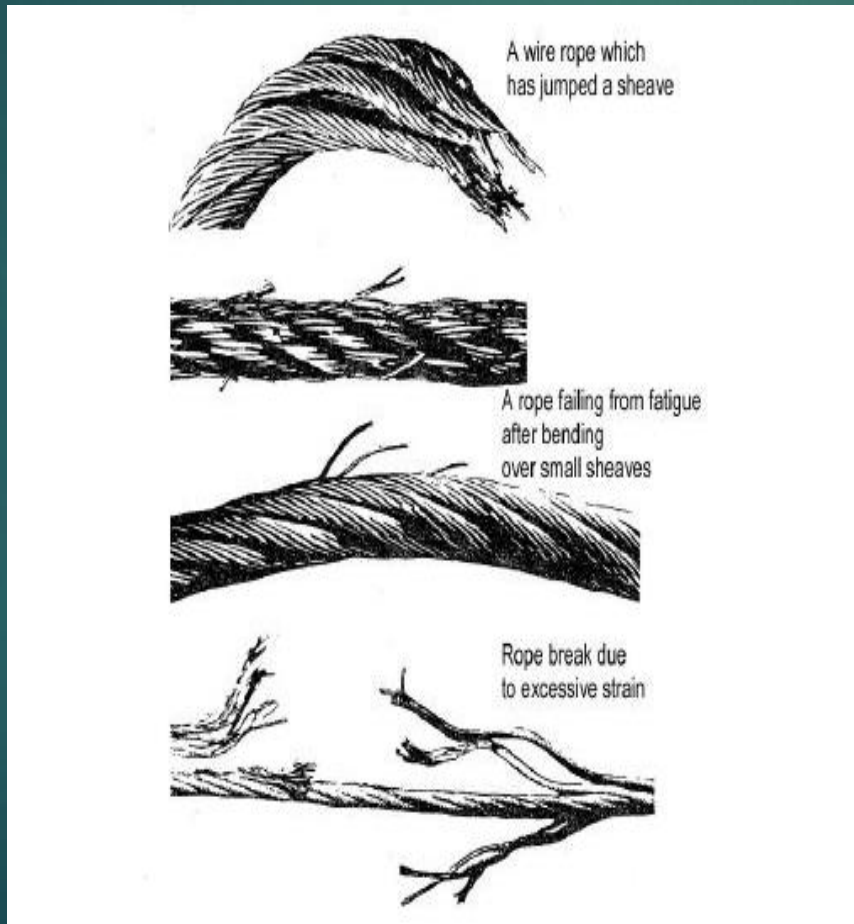


Lifting Accessories

Webbing Sling



Lifting Accessories

Webbing Sling Defects

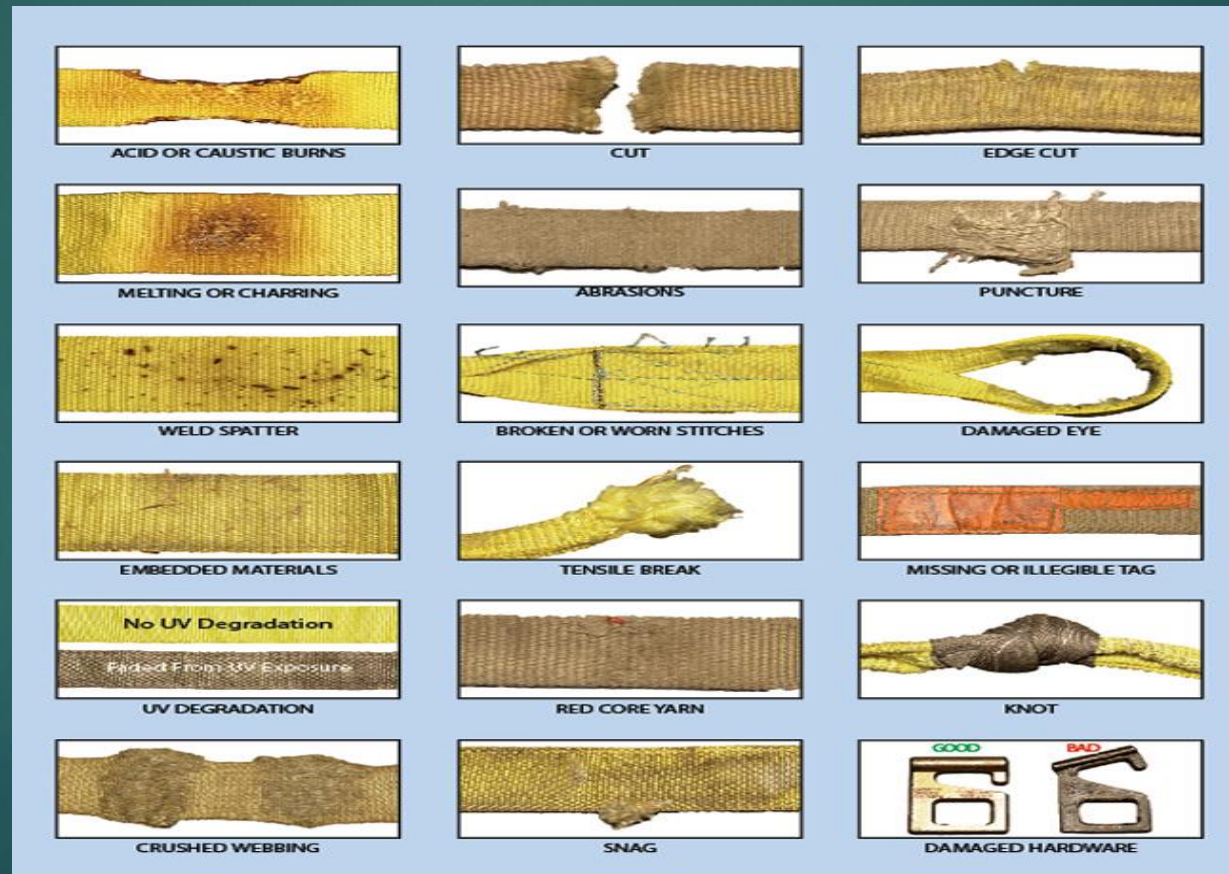

Observations



Observations



▶ 1.8 m as standard Consider as Working @ Height Hazard

A

Anchorage Point

(Pad Eye)
5000 LB = 2500 KG

B

Body Wear

(Harness)

C

Connector

(Lanyard + Shock Absorber /
Fall Arrestor)

• **Fall Protection** (Guardrail System / Equipment) / **Fall Prevention** (Actions / Lighting)

Working At Height



Rescue At Height



Emergency Procedures

- Most important point to put on your mask and escape from area as quickly as possible.
- Locate wind indicator then go upwind.
- Never assume the shortest route is the safest route always use the safest route.
- Follow the instructions.
- Know your role in the station bill.

